



You may create up to five additional Favorites lists.

1. Press the *MENU* button to access the Main Menu. Highlight *SETTINGS*. Use the arrow buttons to highlight *EDIT FAVORITES* and then press the *OK* button. See top left.
2. Click the Right Arrow to access a *NEW LIST*.
3. All available channels will display. Use the *Up/Down arrow* buttons on the remote control to move through the list of channels. When you are on a channel you want to add to your list, press the *OK* button to mark it as part of this Favorites list.
4. To name the list, press the Yellow button on the remote control. Use the arrow buttons to move through the letters on the screen. Press the *OK* button to choose a letter. When you have your list named, arrow down to select Submit. See top right.
5. To Save your favorites list, press the blue button and then press *OK*.
6. Press the *EXIT* button on the remote to leave the menu.

To Access your favorites list:

1. Press the *FAV* button on the remote control. See directly below.
2. All Favorites lists will display; lists that you have created will display with a star.
3. Arrow down to highlight the Favorites list you want to use and then press the *OK* button on the remote control. The list you have selected will show just above the channel number.
4. With the favorites list selected, you will browse channels only within that list.

OR: You may also press the Blue button anytime the guide is displayed to see which list is currently selected. Repeatedly press the blue button to rotate through the lists to the one you want.

