

Programming A Royal Big-Button Remote To Santel Set-Top-Boxes

Amino A140, A540, A130.

- 1) Press & Release “Cable Power” button.
- 2) Press & Hold “Setup” button and the Yellow “A” button until the “Cable Power” blinks twice (may take 3-5 seconds).
- 3) Verify Channel +/-, Guide, Menu buttons are working.



Innovative Systems IS-5112w

- 1) Press & Release “Cable Power” button.
- 2) Press & Hold “Setup” and the Blue “B” button at the same time until the “Cable Power” button blinks twice (may take 3-5 seconds).
- 3) Verify Channel +/-, Guide, Menu buttons are working.



Note “S.T.B.” sticker may or may not be present or in the spot shown!*



Amino Kamai 7X/7B

- 1) Press & Release “Cable Power” button.
- 2) Press & Hold the “Setup” button and the Green “D” button at the same time until the “Cable Power” button blinks twice (may take 3-5 seconds).
- 3) Verify Channel +/-, Guide, Menu buttons are working.





SANTEL REMOTE CONTROL PROGRAMMING TO TV SET

Big Button Remotes can be programmed one of two different ways. Those are as follows:

First Method:

- 1) Press and hold the “Setup” button until the “TV Power” or “Cable Power” button blinks twice (may take 3-5 seconds).
- 2) Press and Release the “TV Power” button.
- 3) Aim your remote at the TV, press and hold the “OK/SELECT” button until the TV turns off. Let go immediately as the TV has powered off. *This can take several seconds to trigger the right code to turn the TV off! Be patient!*
- 4) Press and release the “TV Power” button to verify the TV turns back on. If so, your remote should be correctly programmed. If not, repeat steps or try the second method.

Second Method:

- 1) Press and hold the “Setup” button until the “TV Power” or “Cable Power” button blinks twice (may take 3-5 seconds).
- 2) Press and Release the “TV Power” button.
- 3) Press and hold down the Digit/Number button corresponding to your TV brand as follows:

1 – Insignia / Dynex	6) Samsung
2 – LG / Zenith	7) Sharp
3 – Mitsubishi	8) Sony
4 – Panasonic	9) Toshiba
5 – Philips / Magnavox	0) Vizio
- 4) Let go of the number key immediately as your TV turns off.
- 5) Press and release your “TV Power” button to verify the TV turns back on. If so, your remote should be correctly programmed. If not, repeat steps or try the first method.

