


 



Unlocking the Default Setting to Make AUD, DVD, and VCR Buttons Programmable

The AUD, DVD and VCR mode keys have a default setting which means they are automatically set to the STB. If you would like to program these mode keys to your devices, please follow the instructions below to lock the default setting.

1. Press and Hold  until the mode key blinks twice.
2. Type   .
3. Then press the mode key  you desire to program **twice**.
4. This will remove the STB mode and a new Audio, DVD or VCR code can now be programmed.
5. Follow steps 1 through 5 on the first page of this brochure replacing the word "TV" with the name of the mode key you just unlocked.

Setup Codes For Audio - Accessory (M)

Acoustic Research	2226
Altec Lansing	2251
Apple	1115
Definitive Technology	3645
Denon	2502
Dynavox	3231
Haier	3516
Harman/Kardon	3517
iLive	3175
Jamo	2228
JBL	3535
JVC	3049
LG	3217
Martin Logan	3526
Onkyo	3326
Panasonic	3409
Philips	2675
Polk Audio	2228, 3429
Proficient	3661
Roku	1828
Samsung	2660
Sharp	3097
Sony	2610
SpeakerCraft	3661
Toshiba	3627
VIZIO	2454
Yamaha	2021, 2116
ZVOX	2332, 2334

PROGRAMMING VOLUME LOCK

Volume Lock allows you to control the volume through the device identified as having your primary speakers(s), regardless of which mode you are using. On the Potenza ST Remote by default the global volume Lock is set to **TV**, so you can control TV volume while in the **TV, DVD, AUX, or STB** mode. The volume lock feature is programmable. Perform individual Volume Unlock on a selected device to set its volume control for independent operation.

NOTE: The audio mode's (**AUD**) volume controls are active regardless of Volume Lock settings. However, if you lock the volume controls to the **AUD** mode, you will control the audio device's volume in all other modes (i.e. **TV, DVD, AUX, or STB**). This can be an advantage if, for example, you always listen to home entertainment devices through your device's speakers.

Programming Global Volume Lock

The user can globally lock the volume controls to one source mode (Device Key):

1. Press and hold **SETUP** key until the device key blinks twice.
2. Enter **9 9 3** and release.
Note: The LED will blink 2 times after any three-digit programming sequence is entered correctly.
3. Press **VOL +** key and release.
4. Press **Device Key** you want to be the master audio source (**TV, AUD**).

Programming Global Volume Unlock

The user can reset the volume controls to that one source mode:

1. Press and hold **SETUP** until the device key blinks twice.
2. Enter **9 9 3** and release.
Note: The LED will blink 2 times after any three-digit programming sequence is entered correctly.
3. Press **VOL -** key and release.

Programming Single-Device Volume lock

1. Press the desired **Device Key** (**TV, AUD**) to lock the volume to and release.
2. Press and hold **SETUP** key until it blinks twice.
3. Enter **9 9 3** and release.
Note: The LED will blink 2 times after any three-digit programming sequence is entered correctly.
4. Press the **Device Key** (**STB, TV, AUD**) that you want to have the volume control locked to the device selected in step 1.
5. Press **SETUP** and release.

Note: The last selected device LED will blink 2 times if programming sequence is entered correctly.

*Note: After you select a device that has volume unlocked (i.e. **STB**), pressing **VOL+**, **VOL-**, or **Mute**, will control only that device's volume.*